

# AV QUICK START GUIDE - BIOT A115

## Connect to the Room System

### To show content on the display(s):

Connect the provided HDMI cable or USB-C cable to your device.




### To access the room's camera and microphone for video conferencing:

Connect the provided USB-A cable to your device.



### To access the room's speakers to play audio:

Select **Crestron** as the system audio output on your device.



The camera tab allows you to preview and control cameras manually

The mics tab allows you to adjust individual volume and mute/unmute mics

The utilities tab allows access to:

- Display power
- Screen control
- Show video
- HDCP control


Push either power symbol to turn the system off

The source tab allows you to select a source to be displayed

Audio will play from the last selected source, indicated by the highlighted music note

Shows the current state of the in-room display  
*If off is selected, content is still being captured in a Classroom Capture recording*

Volume control for all microphones

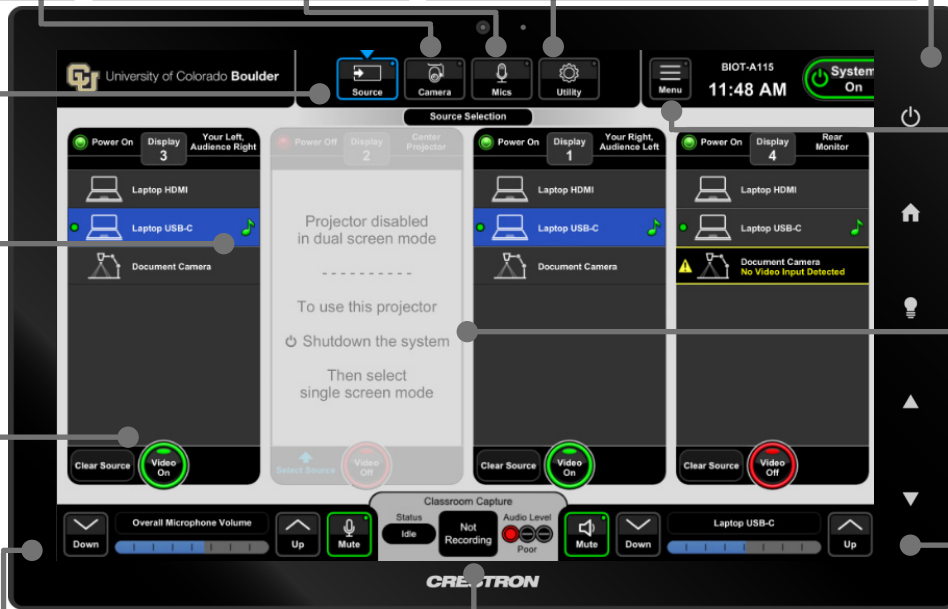


The menu tab allows you to navigate to different pages of the touch panel

The front of the room can be set to a single display or dual displays

To change the display layout follow the directions on the touch panel

Volume control for the selected source



\*\*\*Classroom recording occurs only when requested by the Instructor\*\*\*

Scheduled recordings will automatically start and stop. Once started, recordings can be paused and resumed on the touch panel.

To request Classroom Capture contact the IT Service Center or visit the OIT website:

<https://oit.colorado.edu/services/teaching-learning-applications/classroom-capture/>



Learning Spaces Technology

UNIVERSITY OF COLORADO **BOULDER**

**OFFICE OF INFORMATION TECHNOLOGY**